

IM460 - Loading Rates

The following conditions must be met before loading rates:


- The customer must have a rate protection contract.
- The machine must be declared.

Loading Rates

1. Turn the IM460 off by switching the ON/OFF button to the OFF position.
2. Disconnect the power cord plug from the wall outlet, wait 10 seconds, then re-insert the power cord plug into the wall outlet.
3. Turn the IM460 on by switching the ON/OFF button to the ON position.
4. From the Homescreen, press the **MENU** button.




5. From the Main Menu, press the **Next items** button.

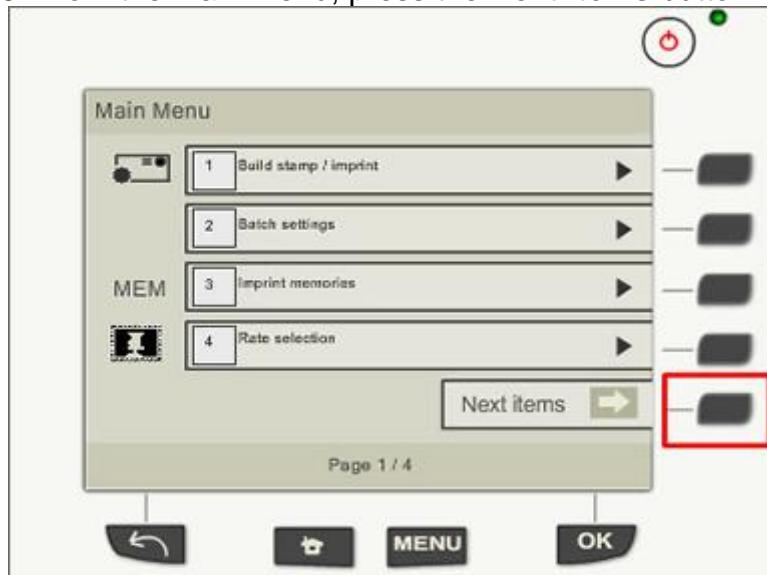

HASLER

6. Press the **Next items** button to access the next page of options.

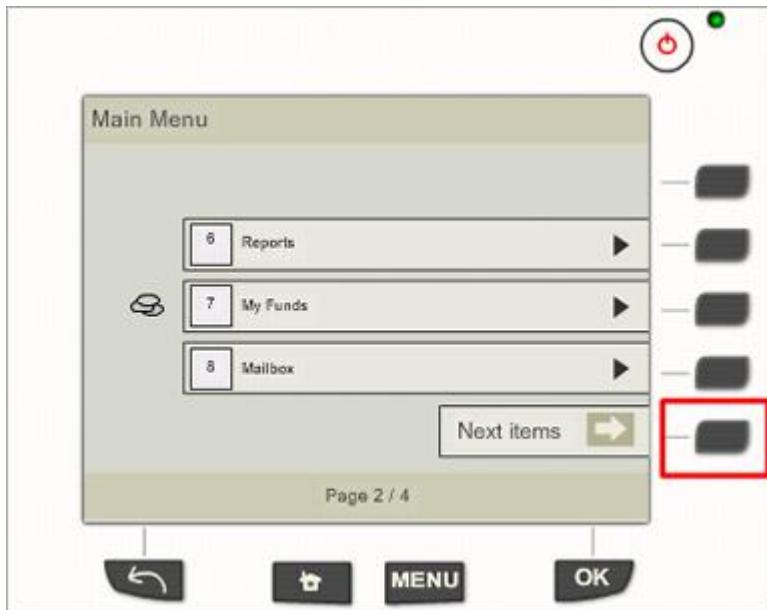

7. Press the **Next items** button to access the next page of options.



8. Press the **Supervisor button.**




9. Using the numeric keypad, enter the Supervisor PIN code, **09430.**
- Press the **OK** button.



10. From the Supervisor Main Menu, press the **Next items** button to access the next page of options.




11. Press the **Options and Updates** button.

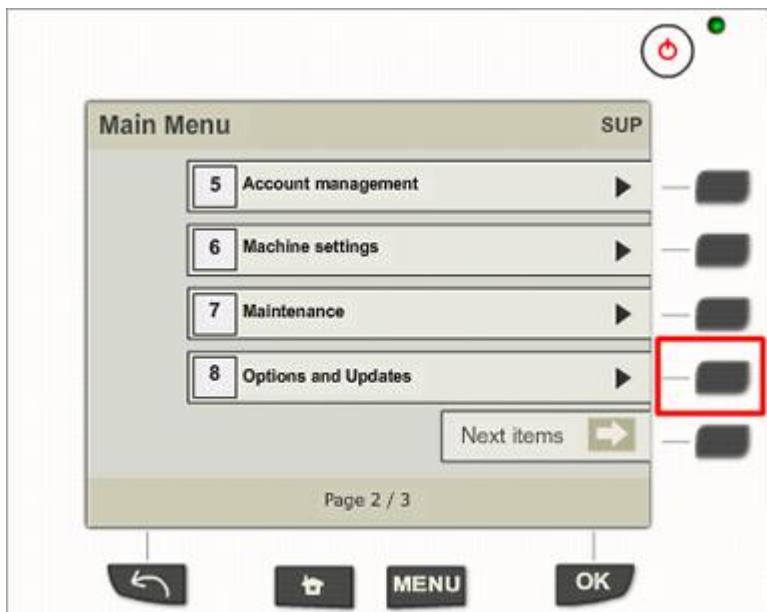


HASLER

12. Press the **Rate Management** button.

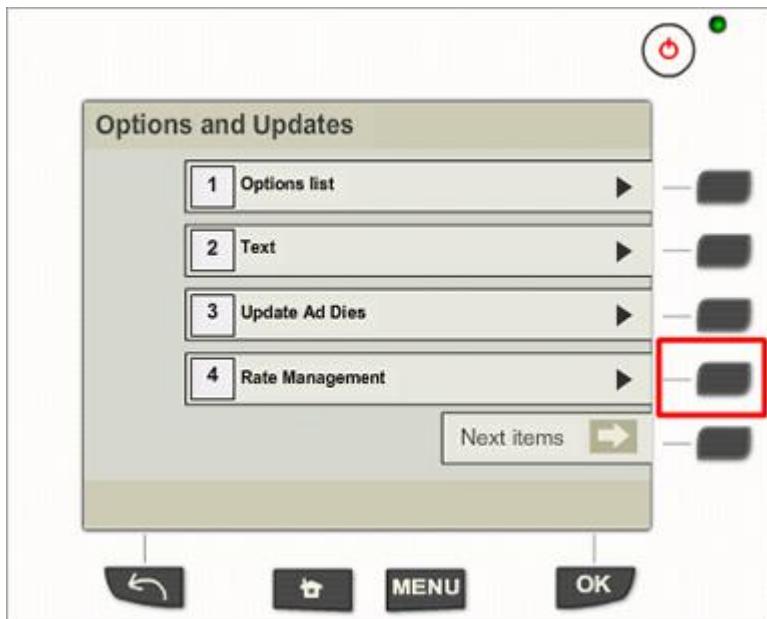


13. Press the **Check for updates** button.

- The rate to be loaded, **USPS - RTL - 01/22/2012**, will have a check mark next to it.

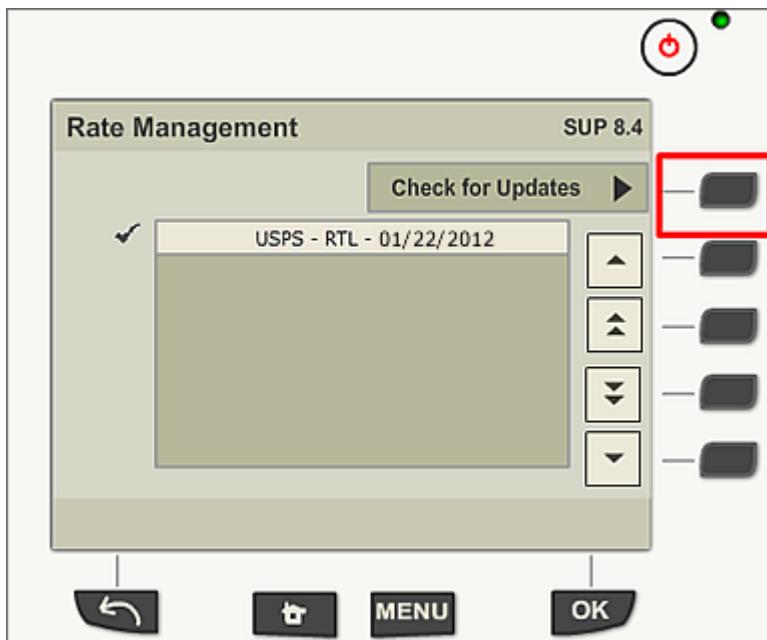


HASLER

14. The machine is preparing for the Generic call.
- Do not interrupt this process.

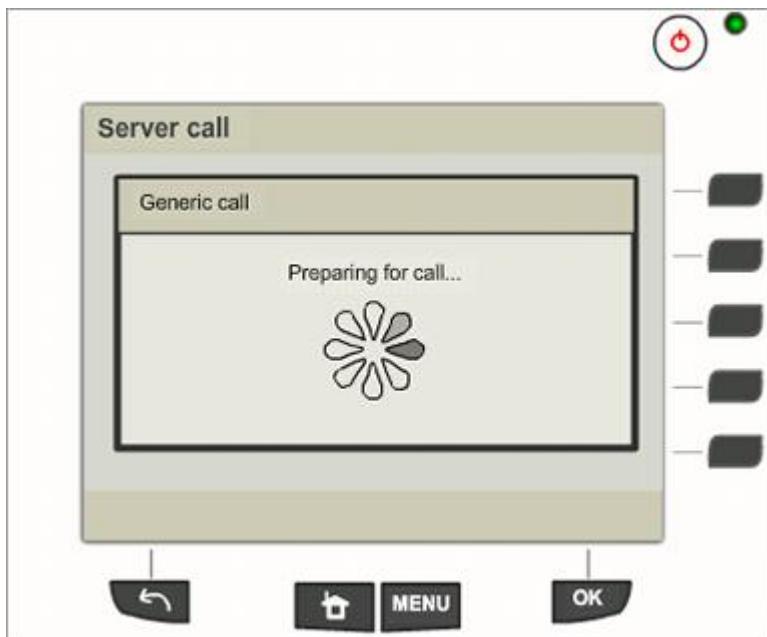


15. The machine is connecting to the server.
- Do not interrupt this process.

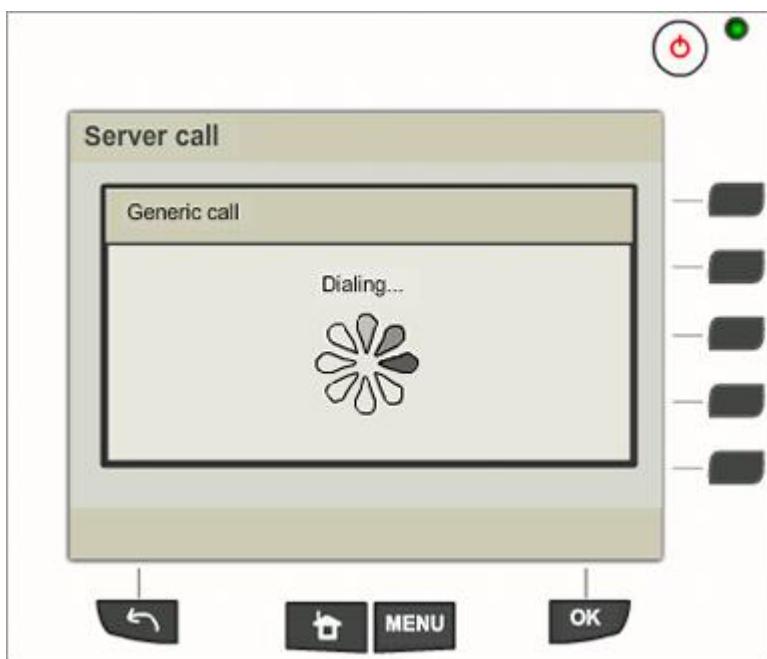


HASLER

16. The transaction is in progress.
- Do not interrupt this process.

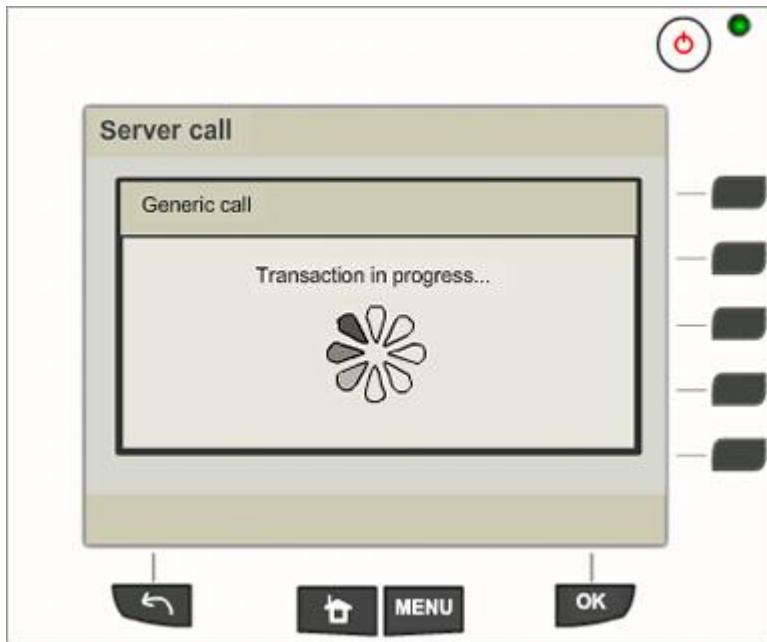


17. The Generic Call finished and the rates loaded successfully.
- Press the **OK** button.

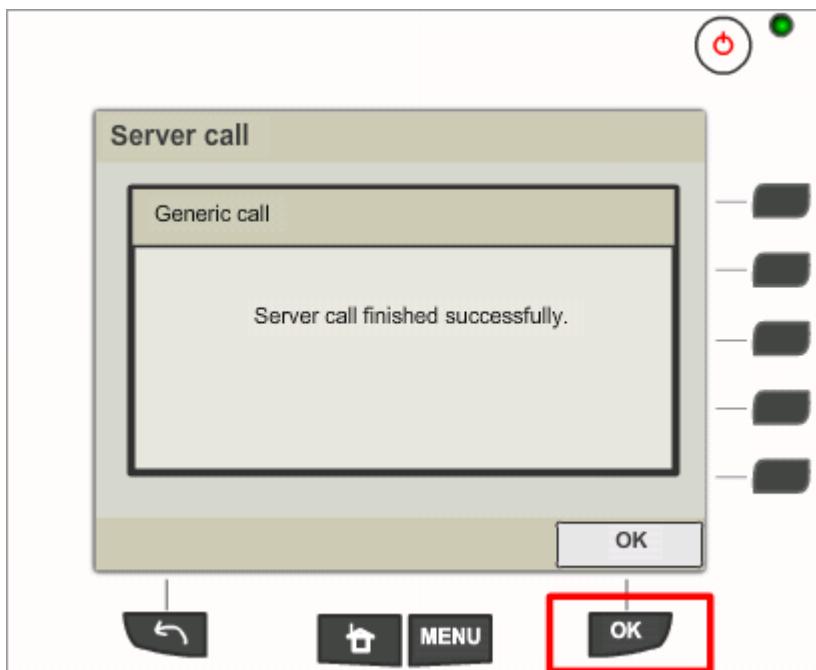

HASLER

18. The current rates are indicated by the check mark.

- The new rates, **USPS – RTL – 01/22/2012**, will become active on the effective date.
- Press the **OK** button.

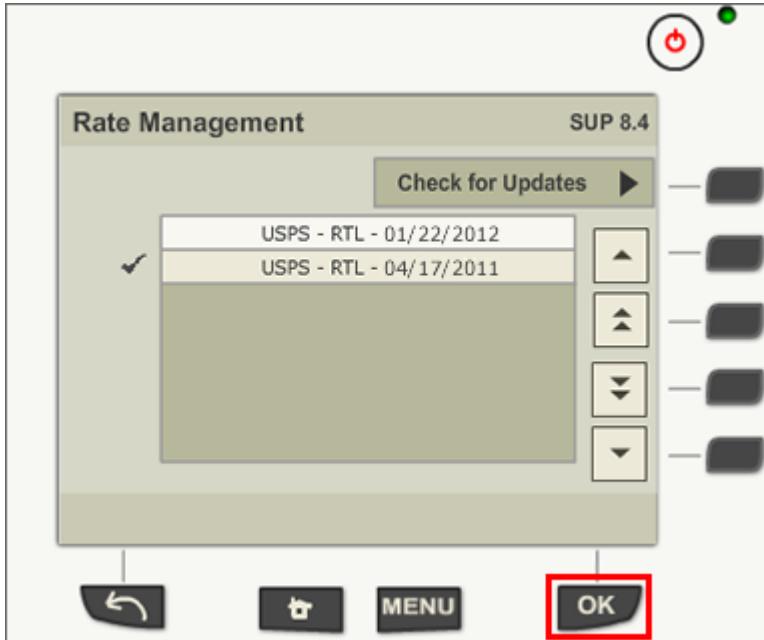

19. Press the **SLEEP / WAKE** button to exit Supervisor mode.

