

HASLER

WJ20 – January 2012 USPS Rate Change - Loading Rates

To install the January 2012 USPS Rate Change on the Hasler WJ20:

1. From the **Ready** screen, press the **MENU** button.



2. From the **ADVERTS** screen, press the arrow button on the bottom right of the screen, until **MEMORY CARD** is displayed.



3. Once **MEMORY CARD** is displayed, press **OK**.



4. **INSERT CARD** will be displayed.

- Insert the Rate Card with the model number facing forward into the slot located on top of the WJ20.
- Press the card down until it stops, press **OK**.



© 2012 Neopost USA Inc. All rights reserved.

No part of this document may be reproduced or distributed in any form or by any means without the express written permission of an authorized representative of Neopost USA. This document and all information contained herein are confidential and may only be disclosed as necessary to support customer use of the equipment.

Limitations of this Document


The information presented herein is subject to change. Neopost USA Inc. ASSUMES NO LIABILITY WHATSOEVER FOR ANY LOSSES OR DAMAGES RESULTING FROM THE USE OF THIS INFORMATION.

5. If the Rate Card is not properly inserted, **INSERT CARD** will be displayed after **OK** is selected.

- Remove the card and repeat the previous steps.

6. **MEMORY CARD** and the rate to be loaded will display on the screen.

- The rate on the screen should read **US1201L**. Press **OK**.

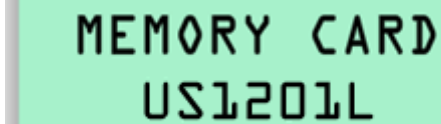

A green rectangular screen with black text. The top line reads "MEMORY CARD" and the bottom line reads "US1201L".

7. The base will prompt to replace the previous rate file.

- If you have a new meter, you will not see this screen.

- Press **OK**.



A green rectangular screen with black text. The top line reads "REPLACE FILE". The bottom line reads "US1104L" with a left arrow icon to the left and a right arrow icon to the right.

8. Wait for the new rates to load.



A green rectangular screen with black text. The top line reads "LOADING . . .". Below it are two rows of seven black squares each, representing progress bars.

9. Once the loading is finished, the base will display **MEMORY CARD LOADING COMPLETE**.




A green rectangular screen with black text. The top line reads "MEMORY CARD" and the bottom line reads "LOADING COMPLETE".

10. The new rates have been successfully loaded.

- Remove the Rate Card from the base.

- Press the **C** button to return to the **Ready** screen.

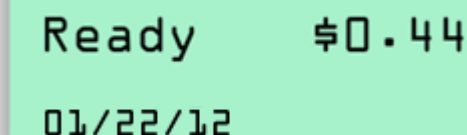

A green rectangular screen with black text. The top line reads "Ready" followed by "\$0.44". The bottom line reads "01/22/12".

11. Unplug the WJ20 power cord from the outlet, wait 10 seconds, and reconnect the power cord to restart the meter.

- The new rates will not become active until the USPS effective date of January 22, 2012.

**The Preset Postage Value may need to be changed after the rates are active.
This change should be made on January 22, 2012.**